


# Montageanleitung Assembly Instructions Instruction de montage

Quellluftdurchlässe  
Displacement flow diffusers  
Diffuseurs à déplacement d'air

## QL-BE-RO

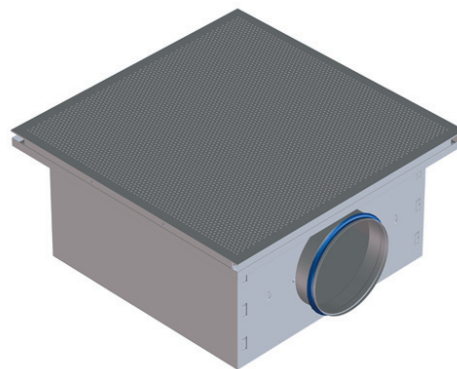

**TROX**® **TECHNIK**  **HESCO**

TROX HESCO Schweiz AG  
Walderstrasse 125  
Postfach 455  
CH - 8630 Rüti ZH

Tel. +41 (0)55 250 71 11  
Fax +41 (0)55 250 73 10  
[www.troxhesco.ch](http://www.troxhesco.ch)  
[info@troxhesco.ch](mailto:info@troxhesco.ch)

# Montageanleitung Quelluftdurchlässe



## Assembly Instructions Displacement flow diffusers

### Instruction de montage Diffuseurs à déplacement d'air


<b>Abmessungen</b>	<b>Breite</b>	<b>Höhe</b>
<b>Dimensions</b>	<b>Width</b>	<b>Hight</b>
<b>Dimensions</b>	<b>Largeur</b>	<b>Hauteur</b>

l) B ... x H ...

1

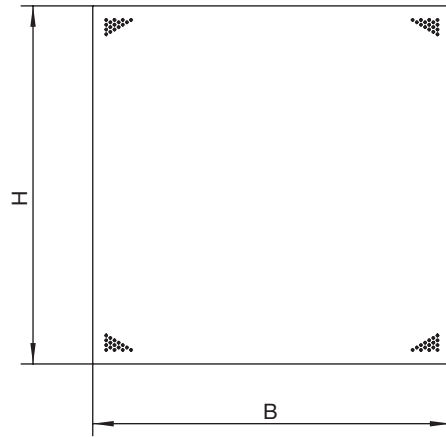
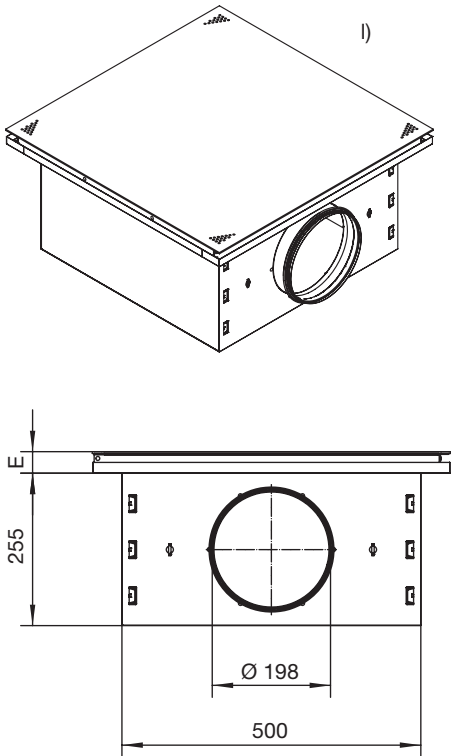


2

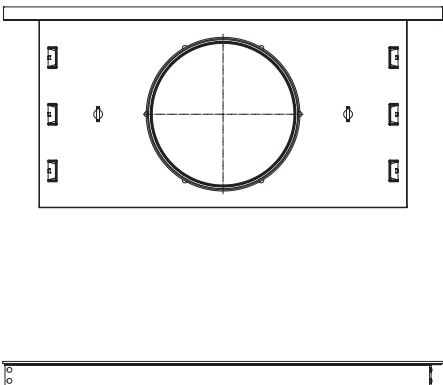


Montageanleitung Quelluftdurchlässe  
Assembly Instructions Displacement flow diffusers  
Instruction de montage Diffuseurs à déplacement d'air


3

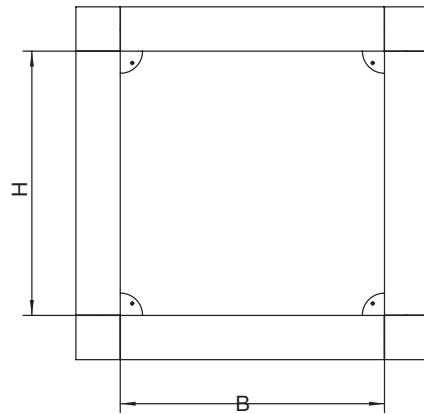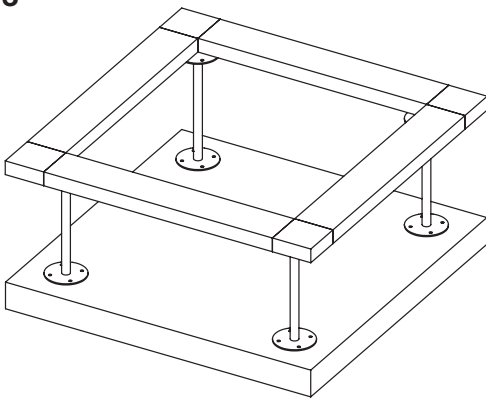

4

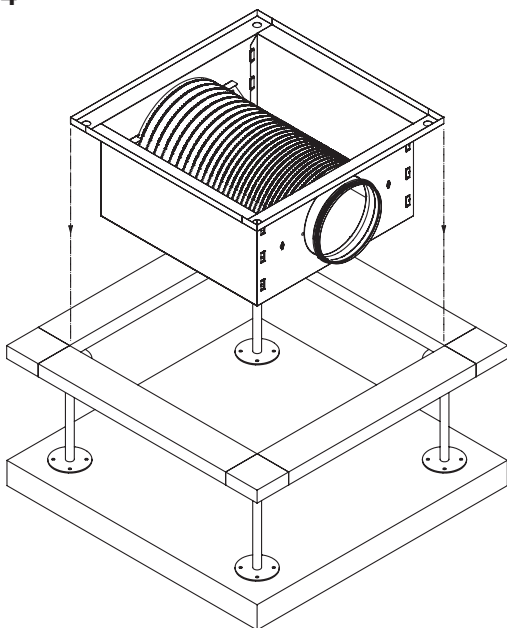

5

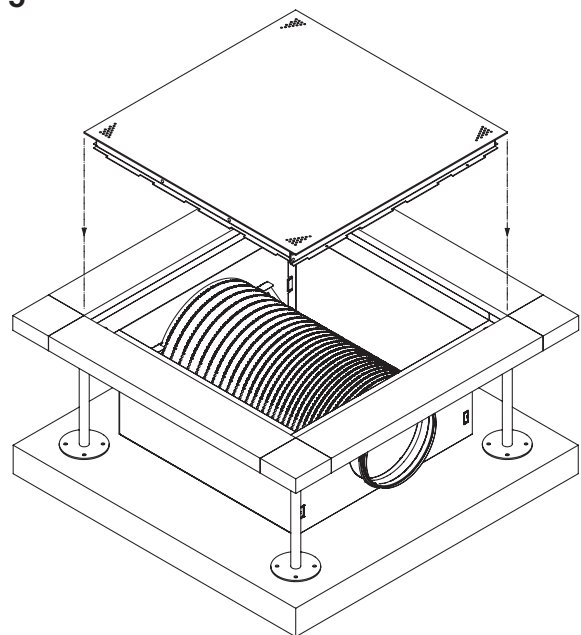



**Montageanleitung Quelluftdurchlässe**  
**Assembly Instructions Displacement flow diffusers**  
**Instruction de montage Diffuseurs à déplacement d'air**